


MERITOR® DIAGNOSTIC TOOL INSTALLATION MANUAL

INSTALLATION


Visit meritor.snapon.com and download the newest version of the .EXE file to your computer. Double click the file. Note: The file name might be different for the latest version.

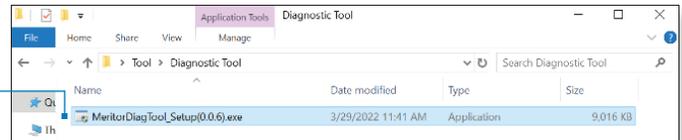


On the next screen, click **Next >**.




Select the first option and click **Next >**.

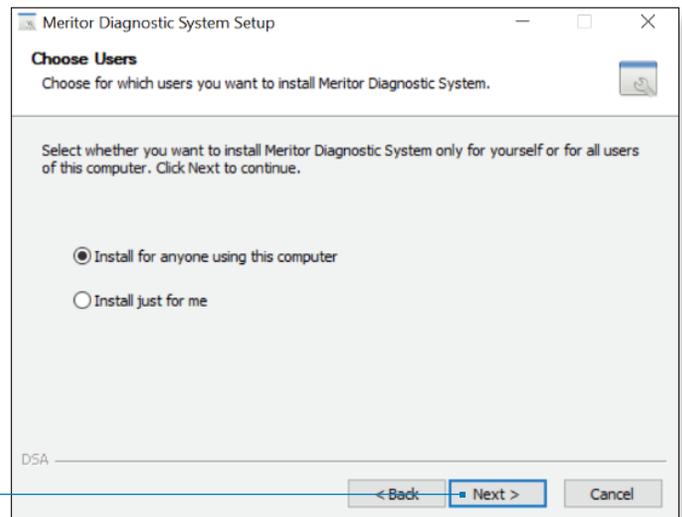


Select the default and click **Next >** and then click **Next >** again.

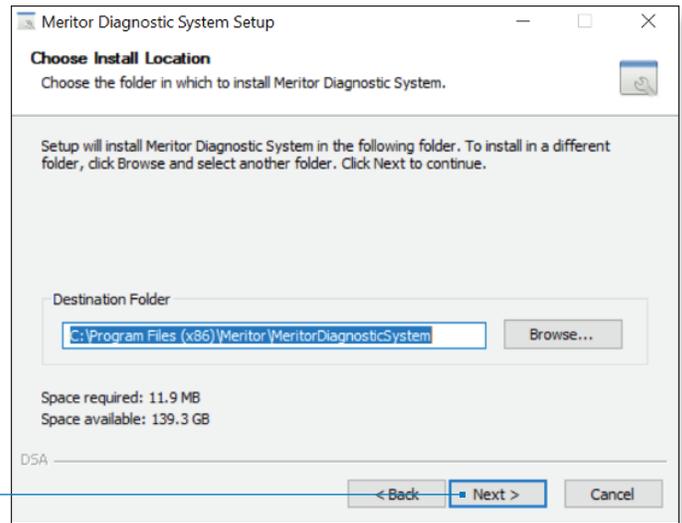


Click **Install**.

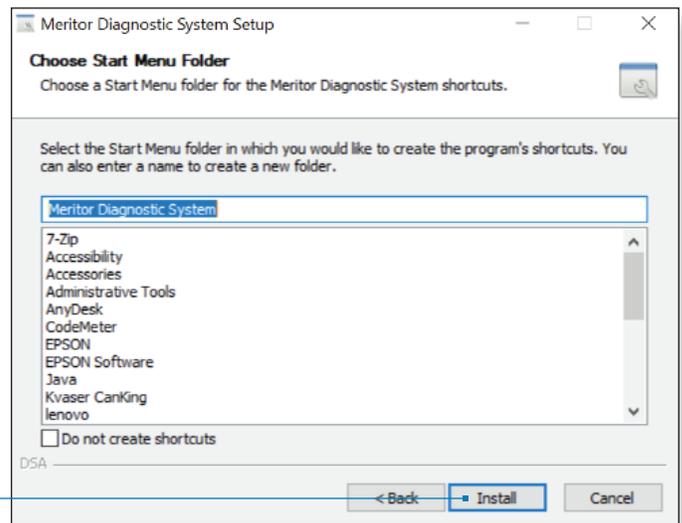

Once installation is complete, click **Next >**.

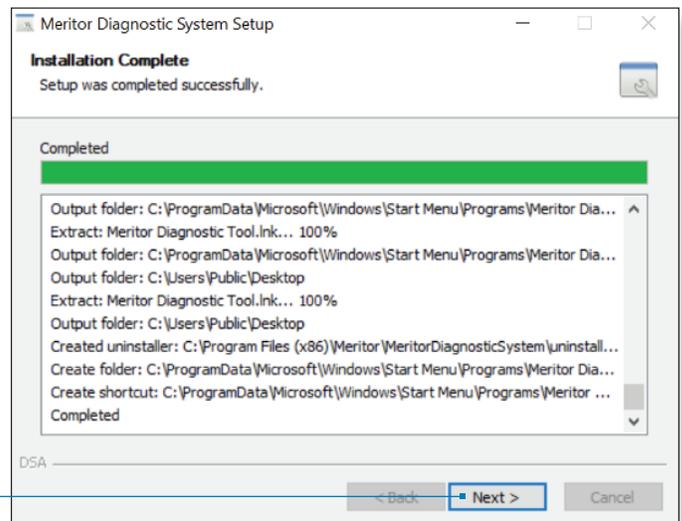

Click **Finish**.

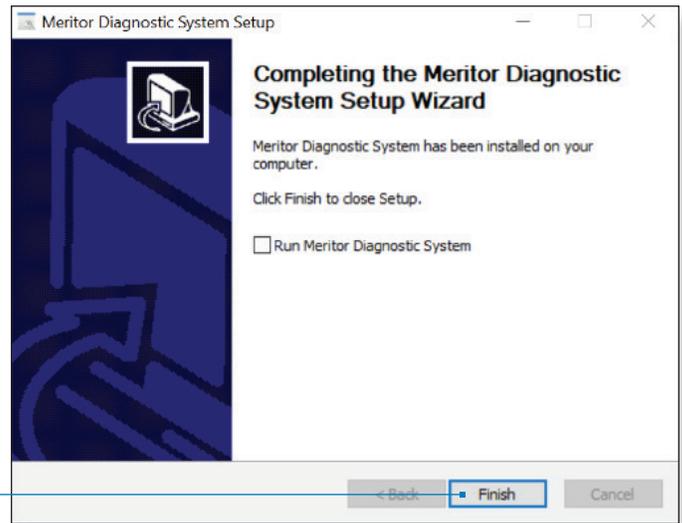


Locate desktop icon and double click it.




CONFIGURE RP1210 ADAPTER


Ensure an RP1210 adapter is connected to the laptop and the appropriate drivers have been installed. Then click on the **gear icon** in the upper right corner.

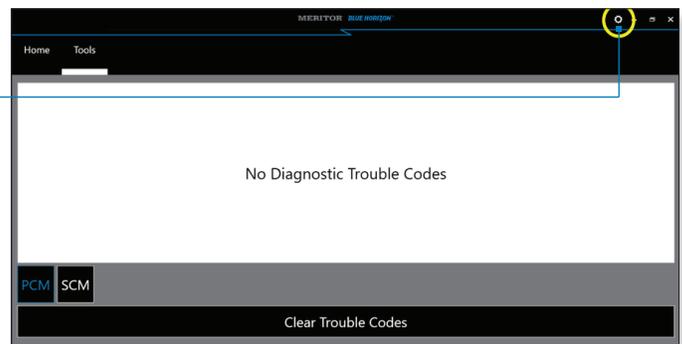

Select **Adapter Configuration**.

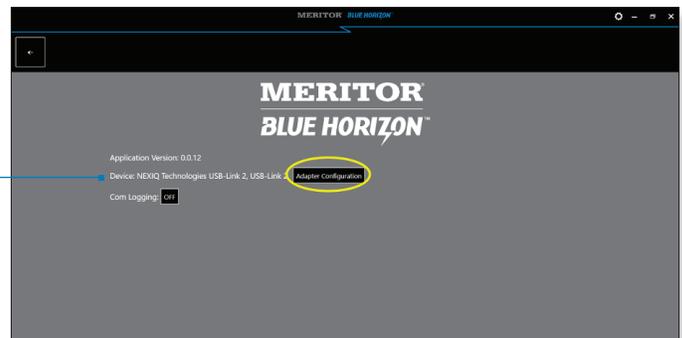


Select the **RP1210 adapter** you are connected to from the list provided.

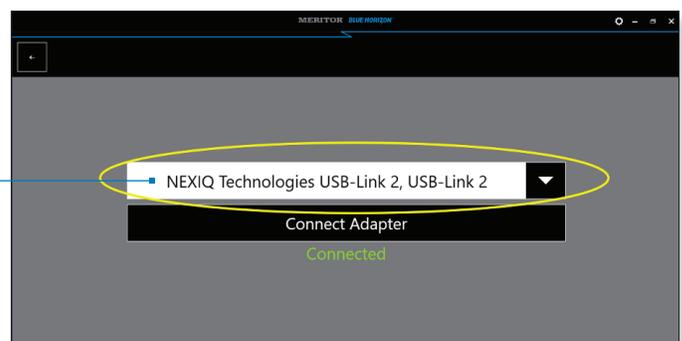

Then select **Connect Adapter**.

Once connected, in the lower right where it says **Adapter**, it will now say **Connected**.

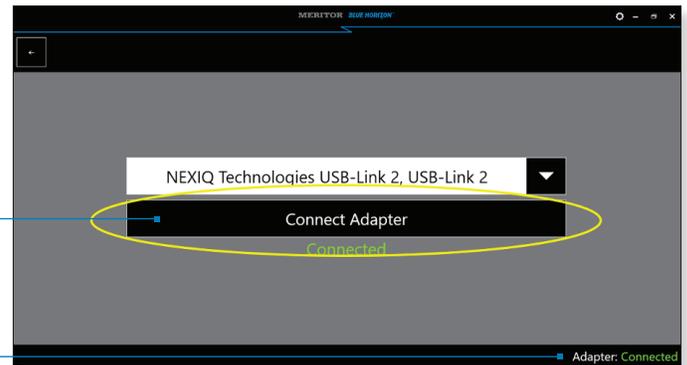

PULLING PCM FAULT CODES

Locate the **Tools** tab in the upper left corner of the screen and click it.




To get fault codes, click on **Trouble Codes**.



Then select **PCM** in the bottom left corner.

When connected to a vehicle, a list of fault codes will appear. Record the fault code number for reference later.

For a list of PCM fault codes, visit meritor.com/lod and refer to Meritor maintenance manual **MM2120**.

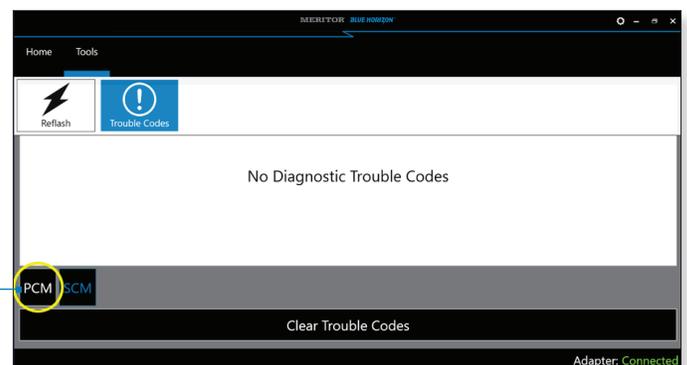


PULLING SCM FAULT CODES

Next, select the **SCM** in the lower left corner.


When connected to a vehicle a list of fault codes will appear. Record the fault code number for reference later.

For a list of SCM fault codes, visit meritor.com/lod and refer to Meritor maintenance manual **MM21106**.

To clear fault codes, click **Clear Trouble Codes** at the bottom of the screen.

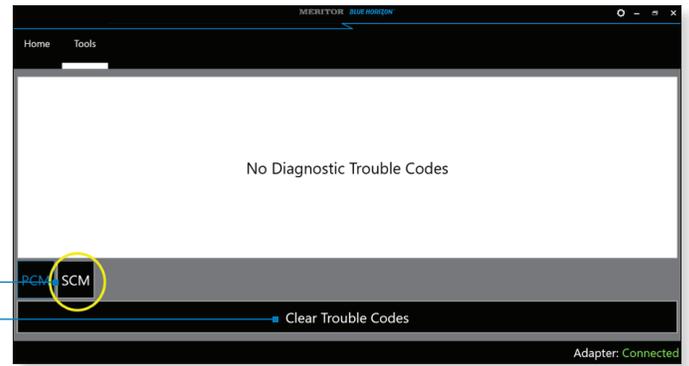

Meritor service and maintenance manuals can be found at meritor.com/lod.

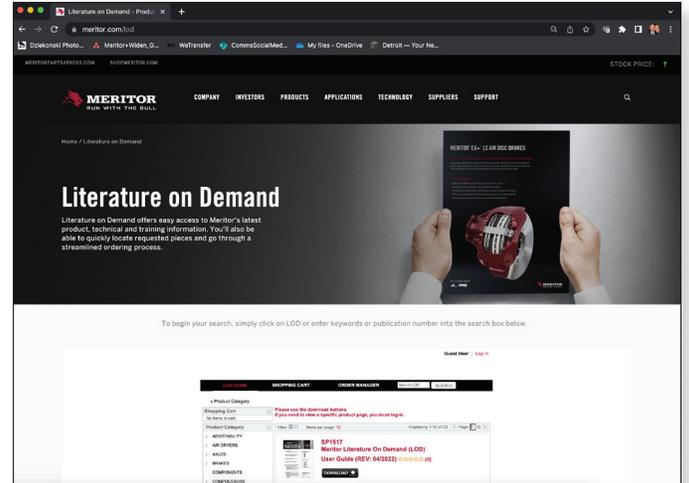

ADDITIONAL SUPPORT

DriveForce™ – Meritor's field support team – keeps your operation moving forward with more than 100 sales, service and aftermarket representatives in North America. For more information or to find your DriveForce representative, visit meritor.com/driveforce.



Meritor Heavy Vehicle Systems, LLC
7975 Dixie Highway
Florence, Kentucky 41042 USA

888-725-9355 U.S.
800-387-3889 Canada
MeritorPartsXpress.com

©2022 Meritor, Inc.
Litho in USA
Issued 8/22